

QUNDA®

QD-D008E universal Disc remote controller


QD-D008E universal Disc remote controller

Thank you for purchasing our remote controller. Please keep this user manual properly for future references.

Battery Installation

Open the cell covers and inserts two new "AAA"(UM-4, AAA, R03) batteries (not supplied). Notes on batteries:

- ◆ Do not mix old batteries with new ones or mix different types of batteries together.
- ◆ Had better remove the batteries if you will not use it for a long time, for fear the electrolyte leaks to damage the controller.

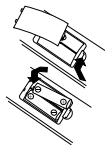


Manual Programming


1. See the code form and find the 3-digit figures.

OKON	072
ONKYO	043, 311, 312
PANASONIC	014, 085, 282, 283
	284, 285, 286, 287, 288, 289, 290, 291, 292


2. Press and hold "set" key then press the "power" key.

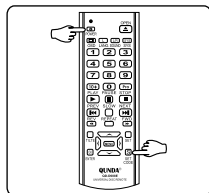

3. When the indicator light is on, release the two keys simultaneously.

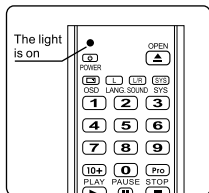


4. Enter the 3-digit figures you have found.

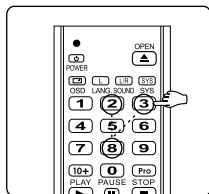


Note: The indicator light will flash once when you enter a figure

5. When the indicator light goes out programming is finished.

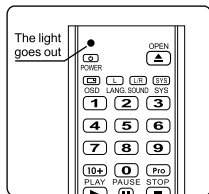


6. Check whether operation of other keys is at normal state. If so, your setting is successfully accomplished.

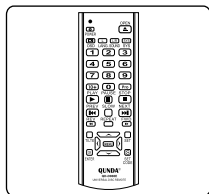


Automatic code searching

If you have tried all the listed code number for your DISC or don't know the brand. Please try the mode of auto code searching.


1. Turn on the DISC player and put into the disc and make disc in a play (or in a stop)

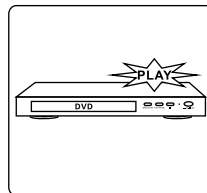


2. Press and hold "set" key then press the "power" key.

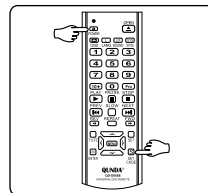


3. When the indicator light is on, release the two keys simultaneously.

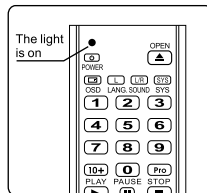

4. Hold the remote controller to aim at the DISC. Continue to press the "stop" (or "play") and release.

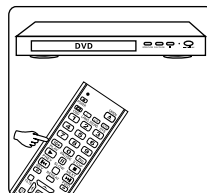


5. If the device is turned off. Press "set code" key the light goes out, programming is finished.

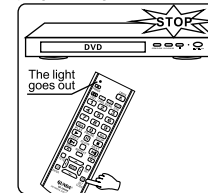

Note: If DISC is in a play, then you press and release the "play" key.

6. Check whether operation of other keys is at normal state. If so, your setting is successfully accomplished.

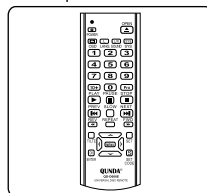

Trouble shooting

If you have problems in programming or using the controller:

1. When setting up code by hand, try all the codes for your DISC in the order in which they are listed if all the codes fail to work, try the steps in "Auto searching code"
2. When "AUTO searching code" cannot control your DISC, then repeat these steps once more. If there have your brand of DISC in the code table, generally can control.
3. Make sure the batteries you are using is not worn out and that they are inserted correctly. Note that whenever you remove the batteries or replace them the preset codes are erased from the memory and must be reset.

Technical Parameters

Controllable distance: larger than 8 meters (different from model)

Power supply voltage: DC3V

Battery model: Battery AAA(UM-4, AAA, R03)

Dimension: L135mm × W45mm × D22mm

Weight: Approx 58g (excl the batteries)

Manufacturer

Name: Suzhou Qunda Electronics CO., Ltd

Address: Donghu road, wuzhong economy development zone, Suzhou, China.

Post code: 215128 Web site: www.qunda.com

★ The final explanatory right is reserved to this company. Any alteration on the design and model will not be further notified.



While setting up the model, the interval between two number key-ins must not exceed 15 seconds.

Brand	Code
AIER PRINCE	066,067
AIWA	140,315,316,317,318,319,320,321,322,323,324
AKAI	006
AMOISONIC	093,094,096,121,267,268,269,270,271
AVLIGHT	131,142,143,144,145
BBK	018,021,027,028,033,048,078,133,236,237,238,239,240,241,242,386,387
BLANTER	064,065
CAINI	347
CHANG HONG	122,123,124,274,275,276,277
DESAI	026,074,099
DIHE	070,077,087,346
DINGTIAN	111
DONGAN	349
DONGDA	342
DONGPENG	343
HAIER	098,135,136
HAOJI	068
HISENSE	131,001,120,141
HITACHI	299
HITER	090
HUABAO	029,061,062,063
HUAJIA	108
IDALL	112,243,244,245,246,247,248,249,250
JIABAO	341
JINGE	345
JINGE WANGPAI	020,031,059,060,076
JINGWEI	011
JINWANG	035

Brand	Code
JINZHENG SHUMA	382
JVC	045,146,328,329,330,331,332
JX2026G	355
KENWOOD	075,325,326,327
KETAI	030
KONKA	125
LG	008
LINGSHUMA	036,076
MALATA	002,009,023,024,073,085,135,137,146,230,231,232,233,234,235
MASHILAN	338
NINTAUS	003,071,079,080,081,082,113,114,115,116,258,259,260,261
OKON	072
ONKYO	043,311,312
PANASONIC	014,085,282,283,284,285,286,287,288,289,290,291,292
PANDA	038,051,052,053,379,380,381
PEACOCK	335
PHILIPS	012,131,147,148,149,279,280,281
PHISONEEP	350
PIONEER	044,134,304,305,306,307,308,309,310
QINGHUA TONGFANG	056,057
QISHENG	005,037,130,262,263,264,265,266
RMS	351,352
ROWA	340
SAMSUNG	004,017,049,136,139,334
SANSHUI	013,046,333
SAST	020,059,060,076,127,129,272,273
SHARP	313,314
SHIDA	100

Brand	Code
SHINCO	001,010,088,251,252,253,254,255,256,257
SIGAOBO	384,385
SKYWORTH	022,025,026,032,034,058,101,102,104
SKYWORTH VCD	383
SONY	040,293,294,295,296,297,298,377
SOVA	150
SUBOR	353
SVA	001,088,378
TCL	000,015,039,054,055,103,278
THIMSON	083
TIANLONG	042,339
TOSHIBA	041,069,300,301,302,303
VCD,MP3	007
VICTOM	354
VECTOR	047,084
WANYAN	110,135
WEIFA	050
XIANHUA	336
XINTIANLI	117
YINGZHIBAO	348
YITONG	337
YOUBISHENG	107,118
YUXING	097,151
ZHAOWEI	344
Other DVD	016,019,106,119,152
Other models	356,357,358,359,360,361,362,363,364,365,366,367,368,369,370,371,372,373,374,375,376,388,389