Service Mode For TDA9381PS/N3/3 Ver.1.1
China CHASSI TV CROWN

Step1. Push The Button

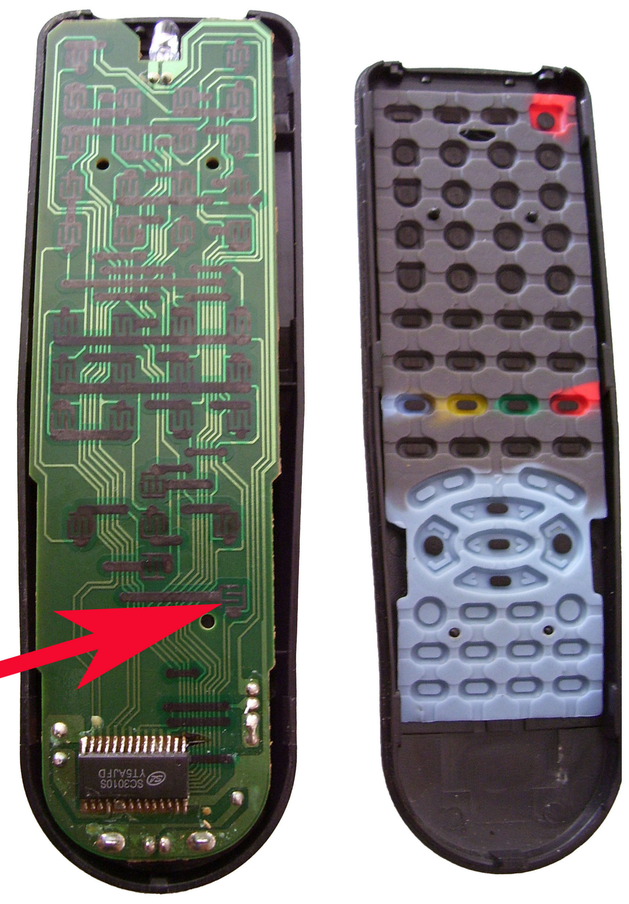

Hiden Button
For Service Mode

Service Mode Displey

Step2 With Buttons
1;2;3;4;5;6;7;8;9;0
Are Shown The Diferent
Service Menus

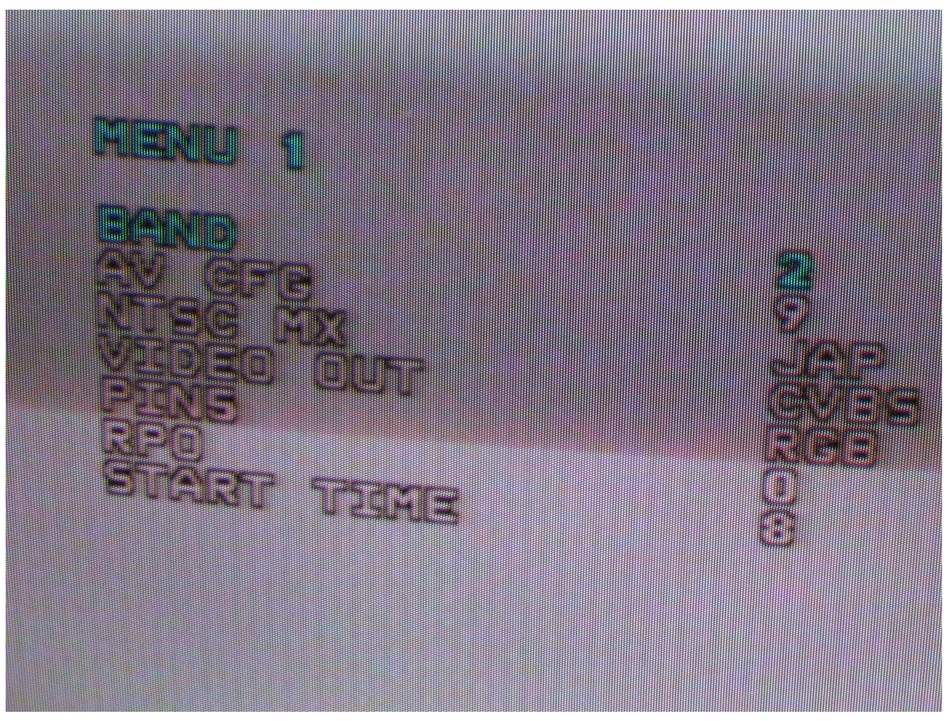

Step3 .For Memorysing the Adjustments Press the hidden button one more Time

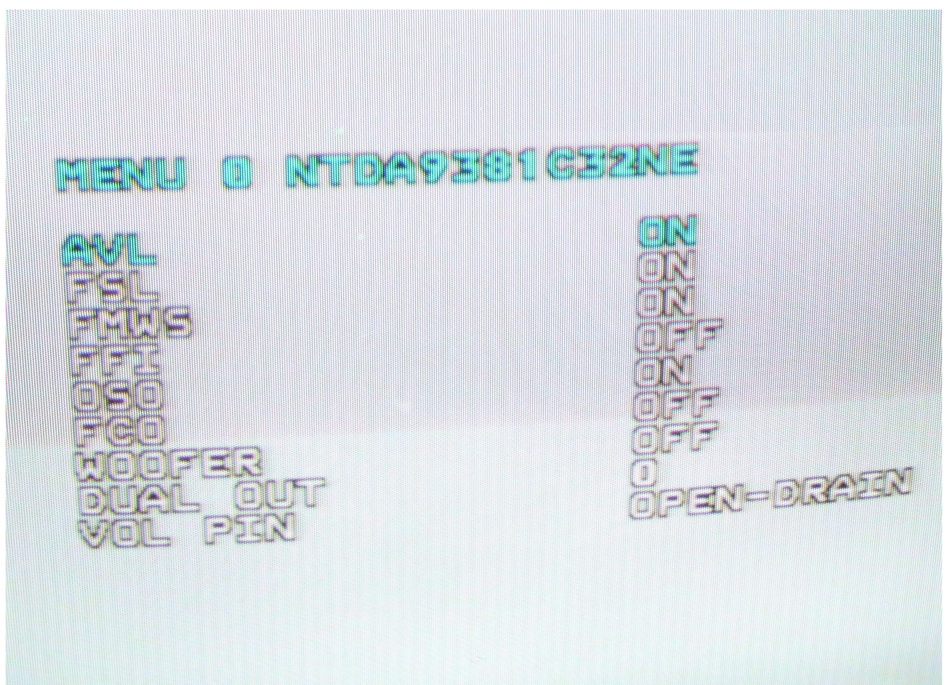

Step4 To Exit from The Service Menu Press the hidden Button again